



**STANDARD
LED**

www.standard-led.com

sales@standard-led.com

USER INSTRUCTIONS FOR INSTALLING LED TUBE

When installing the LED lamp to the conventional fluorescent lamp hanger, please pay attention to the conventional lamp hanger.

Method of installing LED lamp to electronic & inductive ballast lamp hanger as below:


A* When installing LED lamp to Inductive ballast lamp hanger:

- 1* Take out the starter from the inductive ballast lamp hanger.**
- 2* Install the LED lamp into the inductive ballast lamp hanger directly.**


B* Installing LED lamp to Electronic ballast lamp hanger:

- 1* Take out the starter from the electronic ballast lamp hanger.**
- 2* Take away the electronic ballast from the lamp hanger.**
- 3* Then connect the wire with LED lamp directly.**



Picture of how to connect the wire with the lamp holder directly onto the conventional electronic ballast lamp hanger:

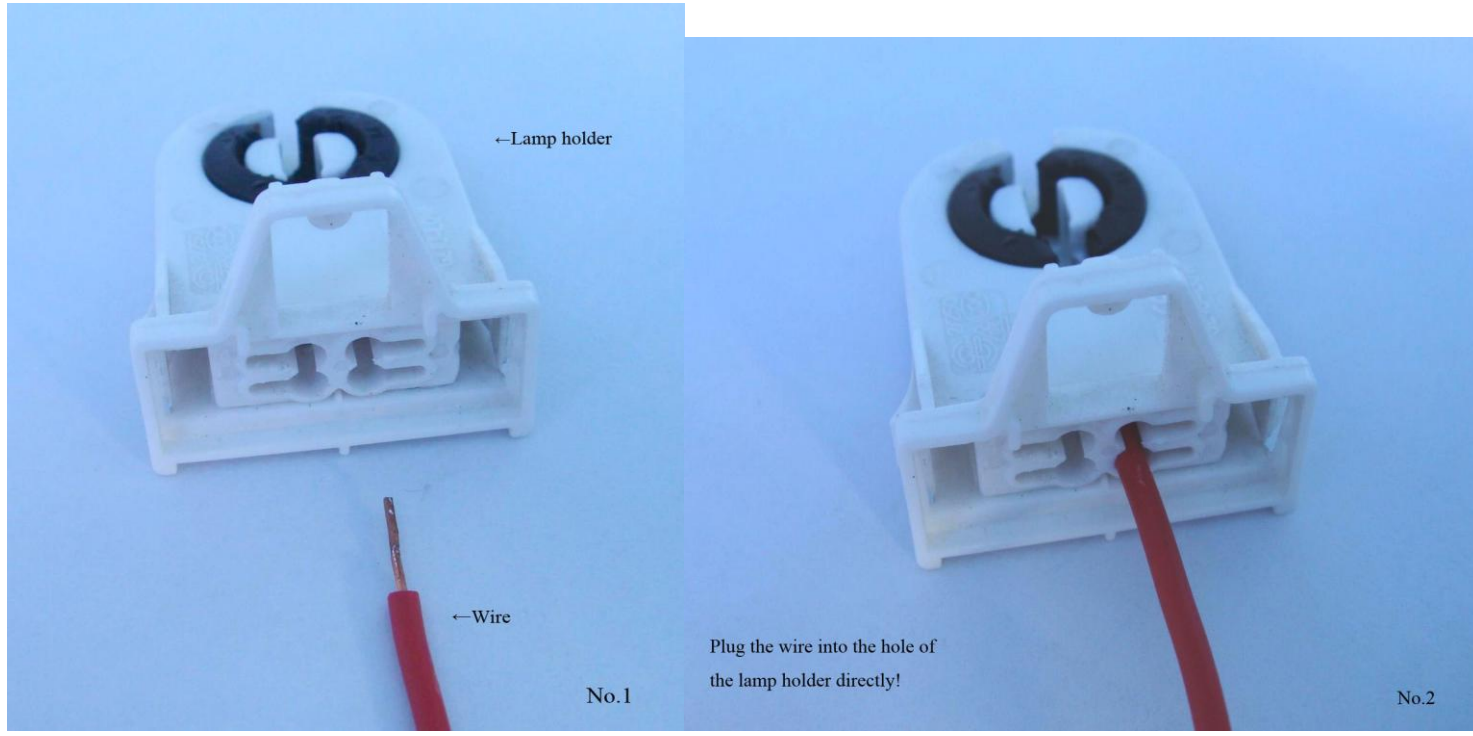

Just connect the 85V - 265V directly to both sides of the LED tube fixtures.(Don't need ballast and starter!)

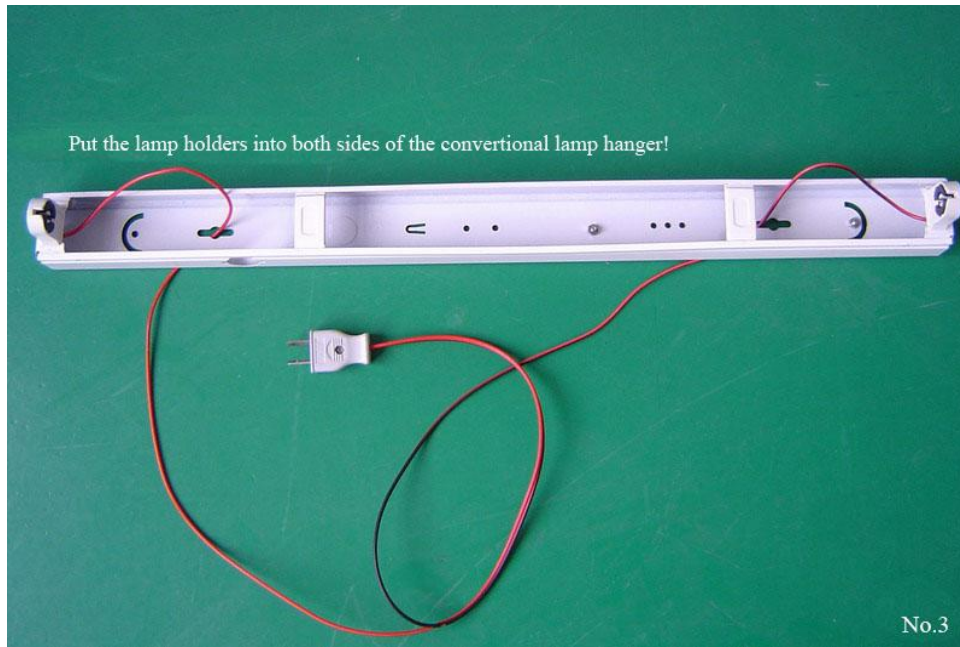

Be sure to not use the starter before you install the LED lamp to conventional fluorescent lamp hanger.

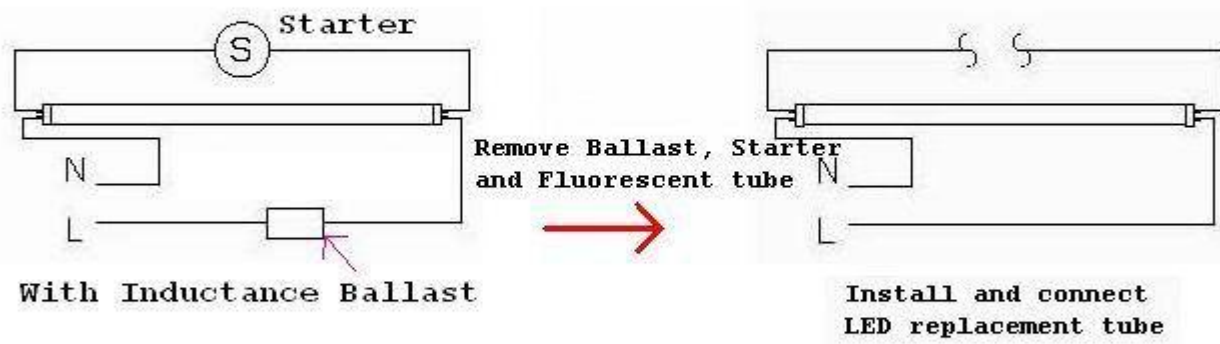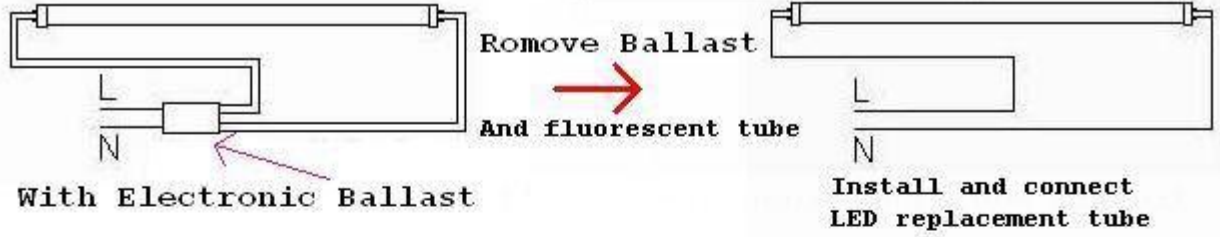

**STANDARD
LED**

www.standard-led.com

sales@standard-led.com